

jura®



GIGA 6 – Quick Reference Guide

GIGA 6 – Quick Reference Guide



These short instructions do not replace the ‘GIGA 6 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.



Precondition: The start screen is displayed.

- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
- ▶ Touch the ☸ symbol.
- ▶ Turn the Rotary Switch until ‘Rinse’ is displayed in the centre.
- ▶ Touch ‘Rinse’ to start the rinse operation.

‘Machine is rinsing’, ‘Milk system is being rinsed’, water flows out of the dual spout.

The rinse stops automatically. Your GIGA is once more ready for use.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** JURA milk system cleaner is available from specialised dealers.
- i** To clean the milk system, use the container supplied.


Precondition: The start screen is displayed.

- ▶ Press the Rotary Switch.
- ▶ Touch ‘Clean the milk system’.
- ▶ Touch ‘Next’.

‘Cleaning agent for milk system’ / ‘Connect the milk tube’



- ▶ Remove the milk pipe from the milk container or milk cooler.
- ▶ Add milk system cleaner to the front part of the container up to the **bottom mark** (indicated by ).
- ▶ Then fill with water up to the **upper mark**.

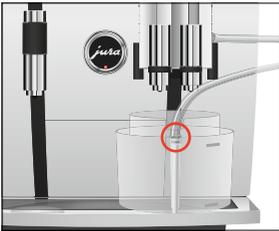

- ▶ Place the container under the dual spout and connect the milk pipe with the container.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.

- ▶ Touch **'Start'**.
'Milk system is being cleaned', the dual spout and the milk pipe are cleaned.

The operation is interrupted, **'Water for cleaning milk system'** / **'Connect the milk tube'**


- ▶ Rinse the container thoroughly and fill the front part with fresh water up to the **upper mark**.
- ▶ Place the container under the dual spout and connect the milk pipe with the container.
- ▶ Touch **'Next'**.

'Milk system is being cleaned'


The operation stops automatically. Your GIGA is once more ready for use.

Dismantling and rinsing the dual spout


The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.

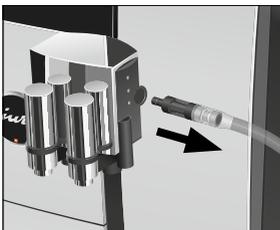


- ▶ Remove the milk pipe and rinse it thoroughly under running water.

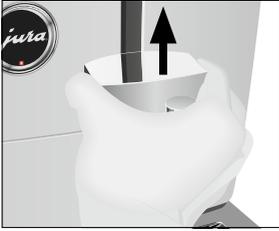


- ▶ Press the releasing devices and pull the cover of the dual spout up and off.

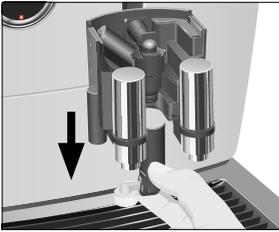


- ▶ Carefully pull the bottom part of the milk system down and off.

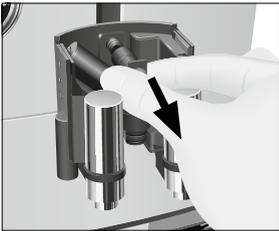


- ▶ Remove the milk system from the dual spout.

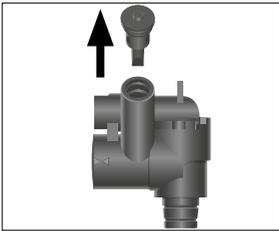


- ▶ Remove the air intake pipe.

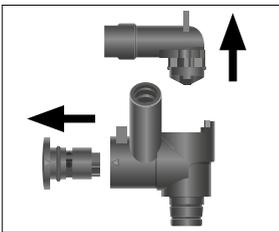


- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.

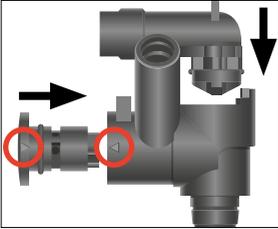


- ▶ Reassemble the milk system. When doing this, note the arrows on the individual parts (circled in red in the picture).

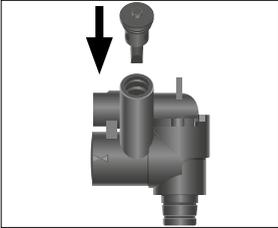


- ▶ Fit the air intake pipe.

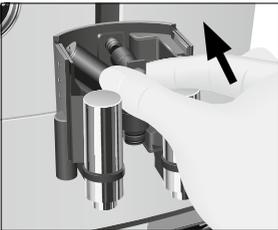


- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.

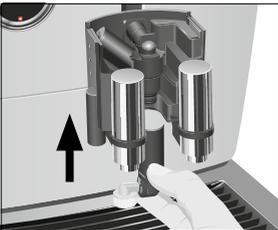

- ▶ Attach the bottom part of the milk system to the part already inserted from below.

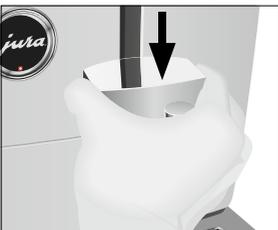

- ▶ Fit the cover of the dual spout. It will click into place audibly.

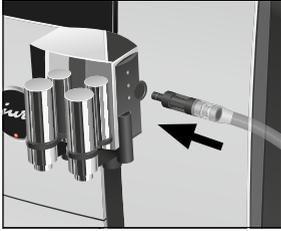

- ▶ Connect the milk pipe to the dual spout.

Inserting/changing the filter

Your GIGA no longer has to be descaled if you are using the CLARIS Smart filter cartridge.

- i** Once the filter cartridge stops working (depending on the water hardness setting), the GIGA will prompt you to change the filter.
- i** CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: The ❄️ symbol is displayed on the start screen (if you are already using a filter).

- ▶ Press the Rotary Switch.
The **'Change the filter'** message lights up red.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Smart filter cartridge and filter extension.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- i** The machine automatically detects that you have just inserted/changed the filter cartridge.

'Filter operation' / 'Saved'

'Filter is being rinsed', water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The start screen is displayed. Your GIGA is once more ready for use.

The CLARIS Smart filter cartridge communicates with your GIGA via RFID technology (frequency band 13.56 MHz). This wireless connection is only used for a maximum of 3 sec. during preparation. In this case, the maximum transmission power is below 1 mW.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the GIGA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: The ☼ symbol is displayed on the start screen.

- ▶ Press the Rotary Switch.
The 'Clean' message lights up red.
- ▶ Touch 'Clean'.
- ▶ Touch 'Start'.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Press the Rotary Switch'
- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the dual spout.
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.





- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
‘Press the Rotary Switch’
- ▶ Press the Rotary Switch.
‘Machine is being cleaned’, water flows out of the dual spout repeatedly.
The operation stops automatically.
‘Empty coffee grounds container’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete. The start screen is displayed.

Descaling the machine

The GIGA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

⚠ CAUTION If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.

CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

-
- i** The descaling programme lasts approximately 40 minutes.
 - i** JURA descaling tablets are available from specialised dealers.


Precondition: The ❖ symbol is displayed on the start screen.

- ▶ Press the Rotary Switch.
The ‘Descal’ message lights up red.
 - ▶ Touch ‘Descal’.
 - ▶ Touch ‘Start’.
- ‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Pour descaling agent into water tank’

- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 600 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

‘Press the Rotary Switch’

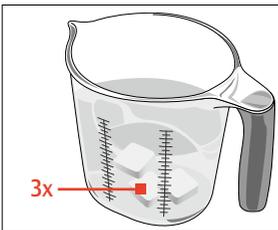

- ▶ Place one receptacle under the dual spout and another under the hot-water spout.
- ▶ Press the Rotary Switch.

‘Machine is being descaled’, water flows straight into the drip tray and out of the hot-water spout and dual spout repeatedly.

The operation is interrupted, ‘Empty drip tray’.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

‘Fill water tank’

- ▶ Empty the receptacles and place them back under the dual spout and the hot-water spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Press the Rotary Switch’

- ▶ Press the Rotary Switch.

‘Machine is being descaled’, the descaling operation is continued. Water flows straight into the drip tray and out of the hot-water spout and dual spout repeatedly.

‘Empty drip tray’





- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Descaling is now complete. The start screen is displayed.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean containers. These traces may negatively affect the coffee result. For this reason clean the bean containers from time to time.

- ▶ Press the On/Off button  to switch the GIGA off.
- ▶ Switch the machine off at the power switch.
- ▶ Open the service cover on the back of the machine by pressing above the JURA logo.
- ▶ Push the red sliding catch completely to the rear to close the bean container.

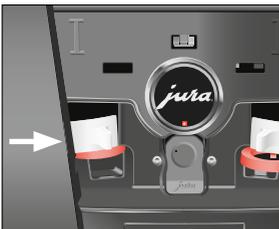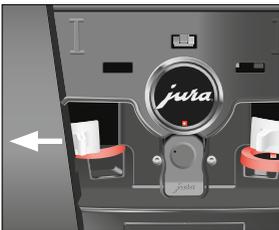

- ▶ Turn the blue locking device outwards.
 - ▶ Remove the bean container.
 - ▶ Remove the aroma preservation cover.
 - ▶ Empty the bean container.
 - ▶ Clean the bean container with a soft, dry cloth.
 - ▶ Fit the bean container.
-
- ▶ Turn the blue locking device inwards.
 - ▶ Pull the red sliding catch completely forwards.
 - ▶ Refit the service cover and fix it by pressing above the JURA logo. It will click into place audibly.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.